


Includes:

- 1 - Manual
- 1 - Phone Holder (RVKNAMPS)
- 2 - Foam Padding
- 4 - Screws (M4 x 12mm)
- 1 - 25mm Metal AMPS 4-Hole Adapter (APMAMPS25MM)
- 1 - 25mm Robust Shaft Arm (SP-RM250)
- 1 - 25mm Ball to 11mm Bolt Head Adapter (SP25MM11)

Important: Clean the application surface and make sure it is free of dirt, dust, and grease before installing the mounting hardware.


1 Install the RoadVise Ultra phone holder to the 25mm AMPS 4-hole adapter ball mount

To begin the installation, find the packaging with the 25mm AMPS 4-hole ball adapter plate and the RoadVise phone holder, which includes foam padding and installation hardware. Next, attach the four mounting screws by inserting them through the 25mm AMPS 4-hole ball adapter plate and into the phone holder.

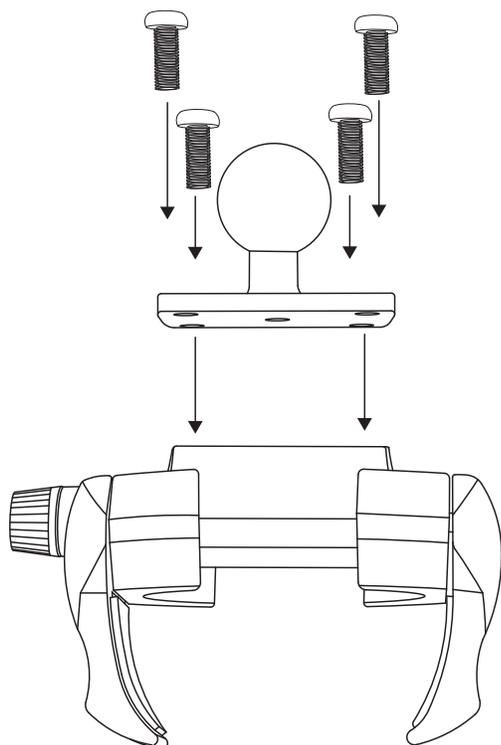


2 Assemble the components

Locate the RoadVise clamp mount, shaft arm, and Universal Locking tablet holder. Loosen the knob to allow the ball adapters to insert into the shaft arm by turning it counterclockwise. Insert the ball mounts to either end of the shaft arm and turn the knob clockwise to tighten.

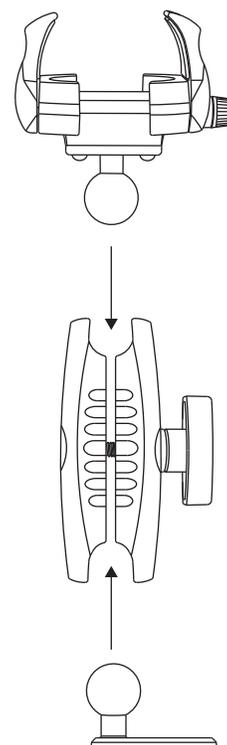


3 Optional - Installing the foam padding if not using a MagSafe charger

Locate the packaging that includes the foam padding with adhesive strips. Apply the adhesive strips to the back of the foam pad and insert into the phone holder cavity.

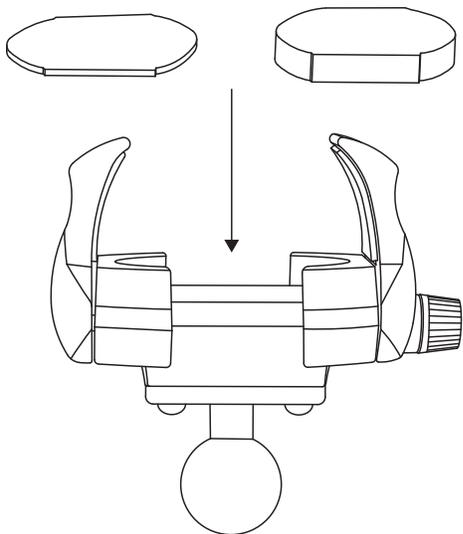


4 Adjust the RoadVise phone holder

To extend the phone holder for larger devices, turn the center knob on the holder. This will lock the non-spring loaded arm in a secure position to support your device.

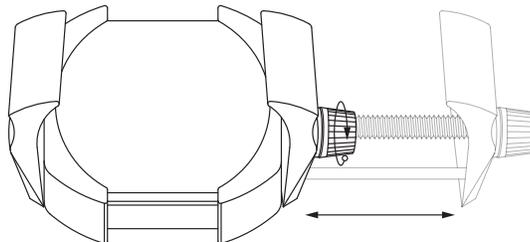

5 Install a device into the RoadVise phone holder

To install your device, start by extending the spring-loaded arm. Then, position your device securely against the non-spring-loaded arm and rest it on the holder platform. Finally, release the spring-loaded arm to secure your device firmly in place.

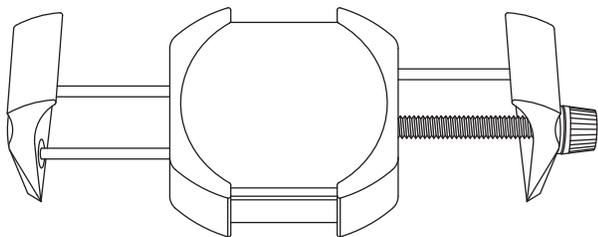

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

