


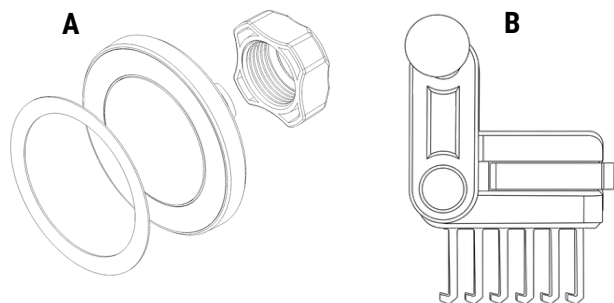

Packaging Contents

A. Magnetic Phone Holder [SPMAGS01]

- Adhesive ring
- Tightening ring


B. Vent Mount to 17mm ball [TESVMM3Y]

Important: Clean the application surface before applying the optional magnetic ring.

Important: If using the optional magnetic ring, please press the adhesive back side firmly onto the application surface. Allow 24 hours for the adhesive to cure before using.


Install the Vent Mount

Extend the vent clip and insert the mount into the vehicle vent. Once positioned, press the clip inward to lock the mount securely in place.

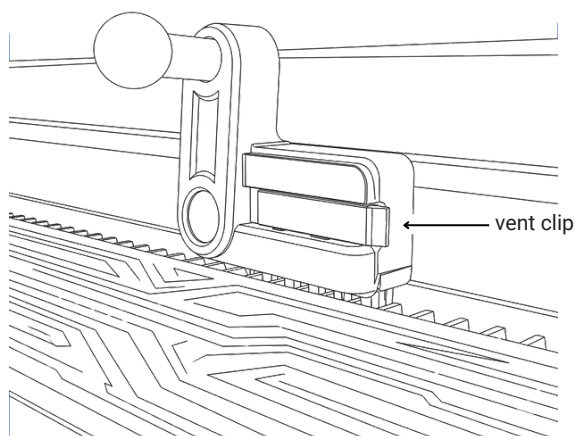


Attach the Magnetic Holder

Place the tightening ring over the 17mm ball adapter. Insert the ball into the magnetic holder socket, then tighten the ring to secure the holder in place.

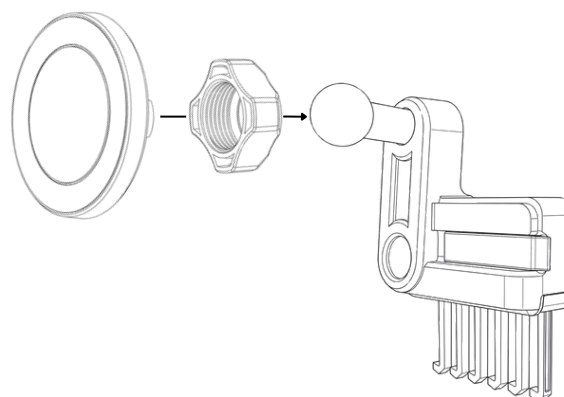


Optional – Install the Magnetic Ring

Peel off the yellow backing, then firmly apply the magnetic ring to the back of your non-MagSafe phone case.

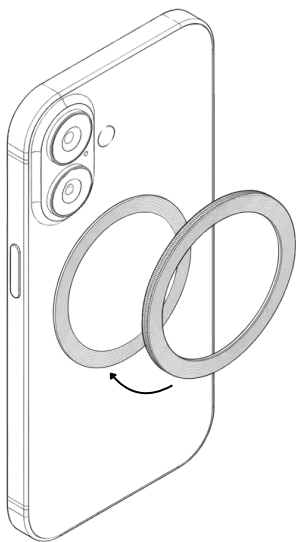

Final Assembly

The mount is fully assembled and ready for use. Adjust the holder as needed to achieve your preferred viewing angle and position.

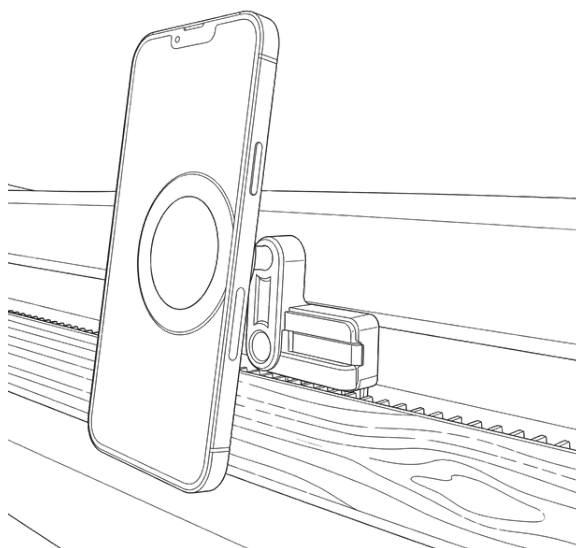

WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

