


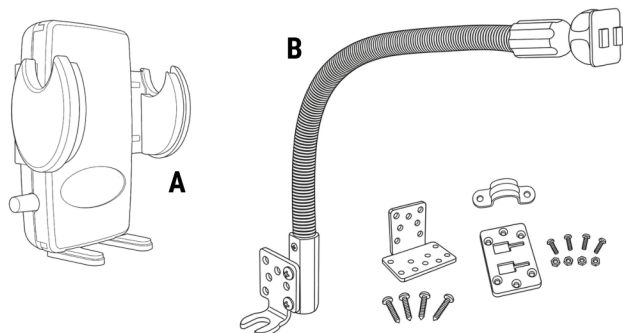


Packaging Contents

- A. Mega Grip™ Phone Holder [SM040-2]**
- B. 22" Gooseneck Seat Rail Base [GN088L22AL]**
 - mounting bracket (x1)
 - screws and nuts (x4)
 - AMPS converter adapter (x1)
 - metal conduit (x1)
 - screws (x4)

Important: Clean the surface of dirt, dust, and grease before installation.


Install the Seat Bolt Bracket - Option 1

Using a socket wrench, loosen the passenger seat track bolt. Position the seat bolt bracket over the bolt, then retighten the seat track bolt securely.

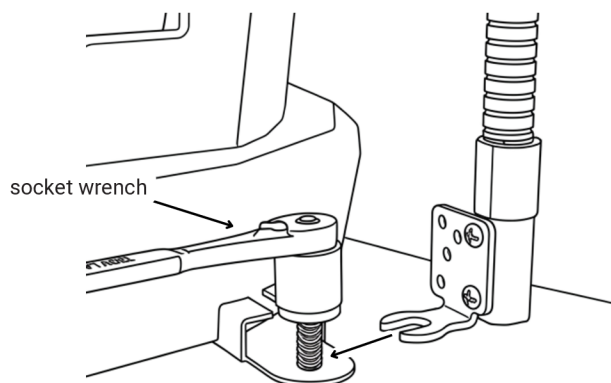


Install the Floor Bracket - Option 2

Thread the floor bracket onto the mount and tighten securely. Adjust the bracket orientation as needed to fit your vehicle, then fasten the floor bracket to the floor or center console using appropriate screws.

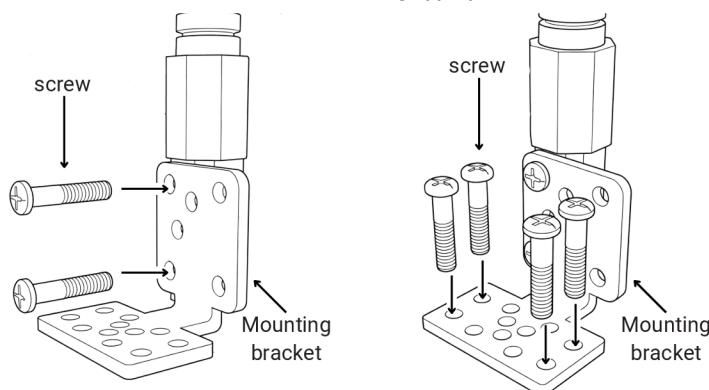


Attach the Mega Grip Holder

Slide the Mega Grip holder's Dual T-Tabs into the pedestal head's Dual T-Slots until it is fully seated and securely locked in place.

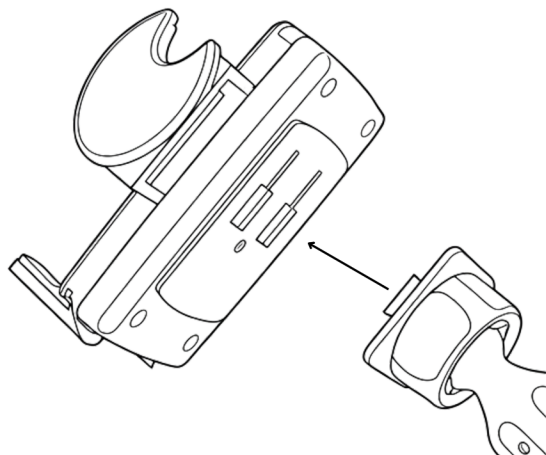

Install Your Phone

Place your phone on the support legs, then squeeze the side grip arms to secure it in place. To remove your phone, press the release button. If needed, loosen the adjustment ring to reposition the holder, then retighten to lock it in place.

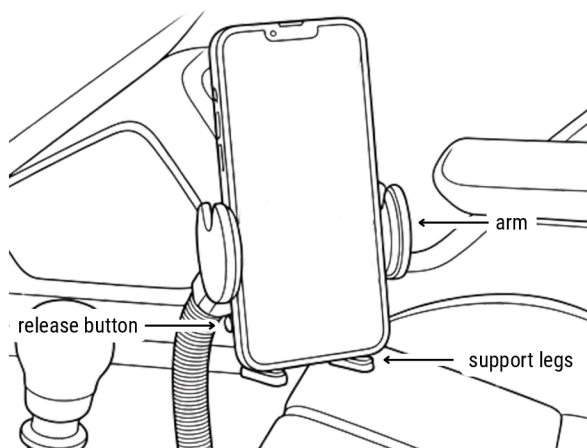

WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.



Packaging Contents

Do not include in packaging, intend for internal use.

#	SKU	Qty
1	SM040-2	x1
2	GN088L22AL	x1