


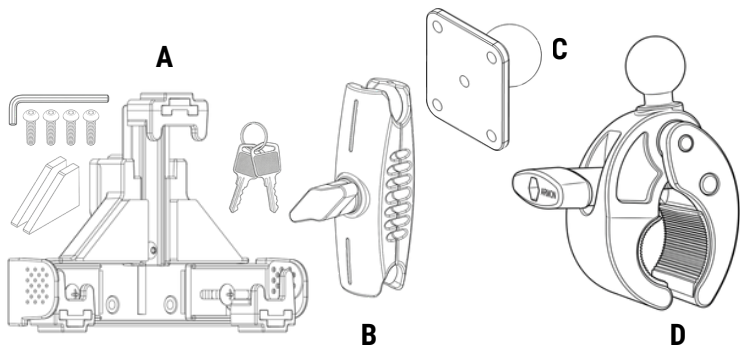


Packaging Contents

- A. LockVise™ Phone Holder [SM090B]**
 - Foam pads (x2)
 - Locking key set
 - Hex key with mounting hardware (x4)
- B. Double Socket Shaft [SP-RM250]**
- C. 25mm ball to AMPS Plate [APMAMPS25MM]**
- D. 25mm ball to clamp mount base [CPMHDB]**

Important: Clean the surface of dirt, dust, and grease before installation.


Attach the Adapter Plate

Align the adapter plate with the mounting holes on the back of the holder. Insert the four screws through the plate and tighten securely into the holder.

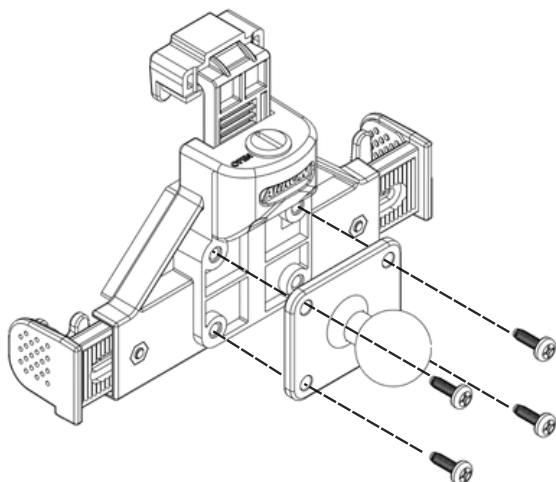


Install the Clamp

Turn the knob counterclockwise to open the clamp. Position the clamp on the mounting surface, then turn the knob clockwise until securely tightened.

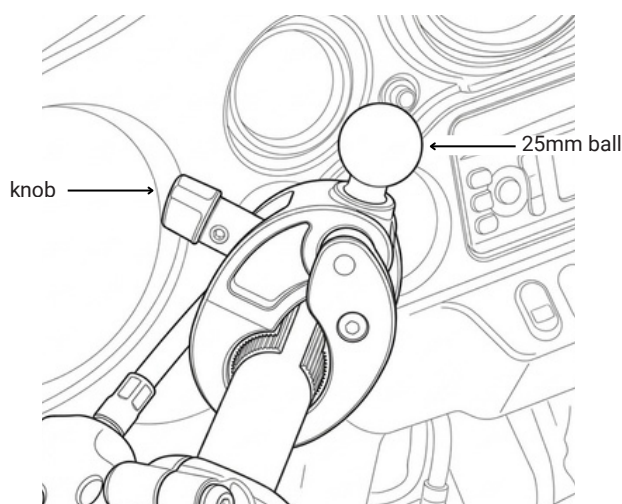


Assemble the Shaft

Turn the adjustment knob counterclockwise to loosen the shaft arm. Insert a 25mm ball end into each socket, then turn the knob clockwise to tighten and secure both ball joints.

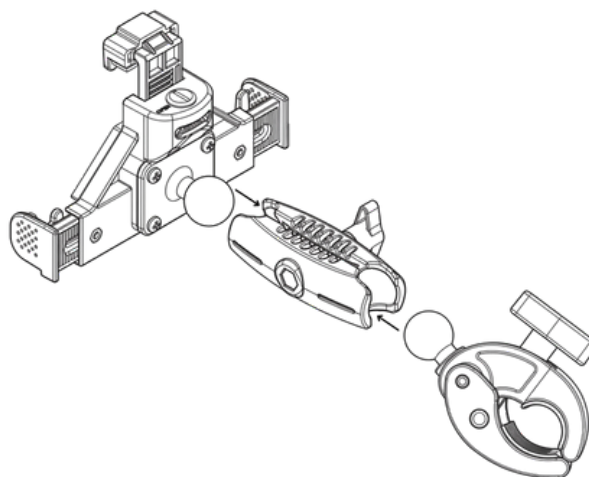

Final Assembly

The mount is now fully assembled and ready for use. Refer to the image below for the completed setup.

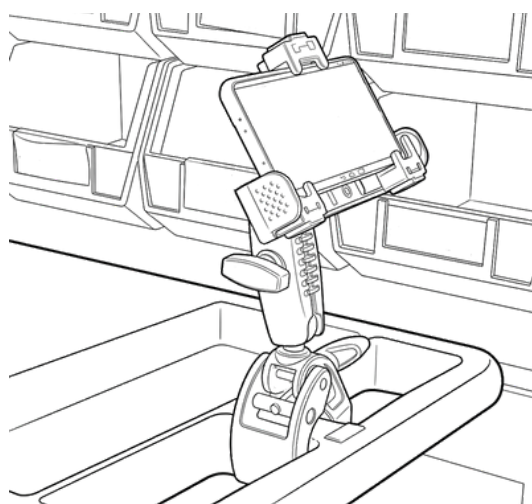


WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.




Optional – Install Foam Padding

If using your phone without a case, remove the adhesive backing from the foam padding and apply it to the device holder for a secure fit.

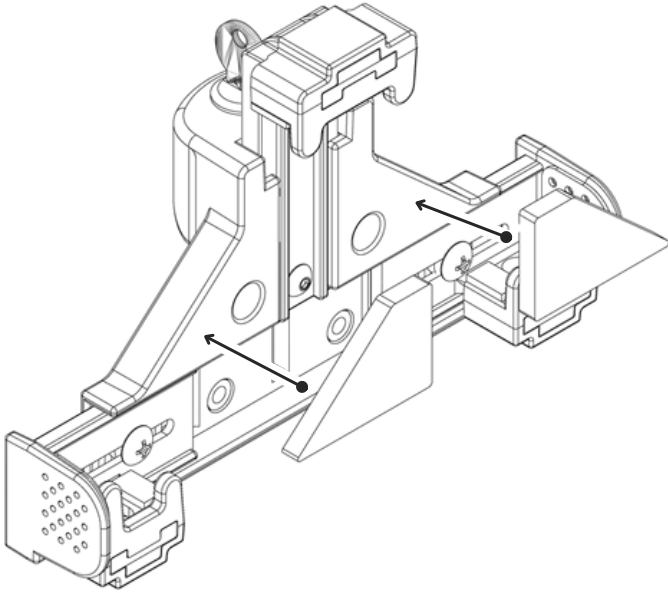


Adjust the Holder Size

Use a Phillips screwdriver to loosen the adjustment screws. Adjust the holder's width and depth to fit your device, then retighten the screws to secure the position.

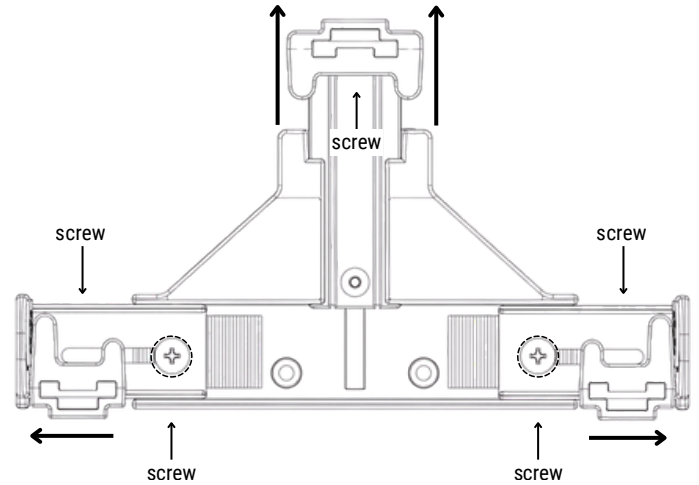

Install the Phone in the Holder

Unlock the holder and pull up the top arm to expand it. Insert your phone, press the top arm down for a secure fit, then use the key to lock the holder in place.

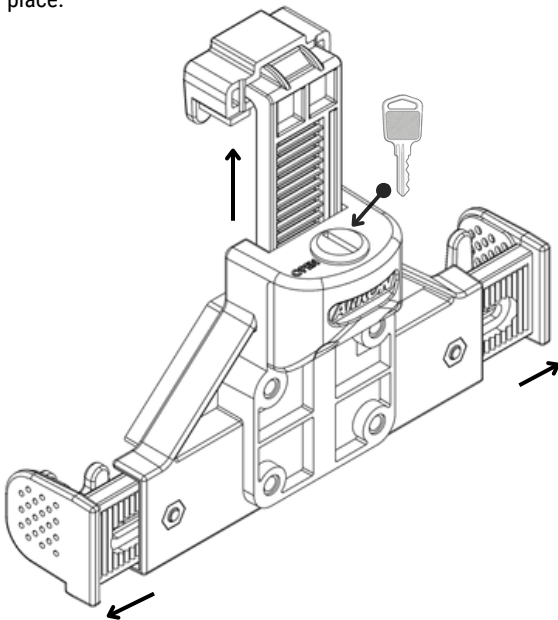

WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system.

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

