


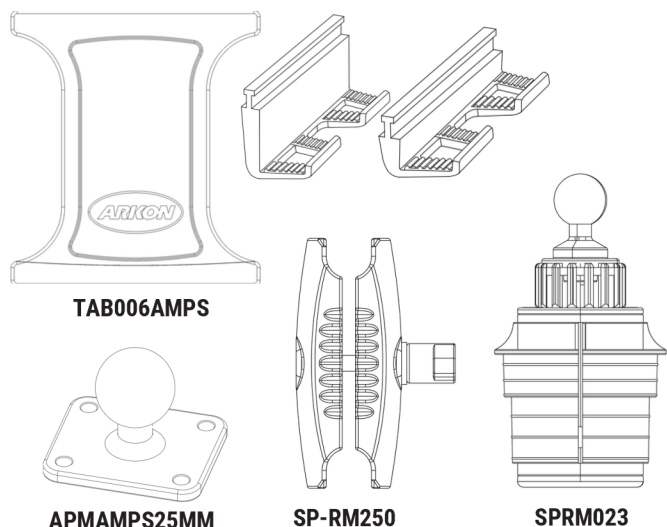

Includes:

- 1 - Slim-Grip® Ultra Pro Tablet Holder with Support Legs (TAB006AMPS)
- 1 - Metal 4-Hole AMPS to 25mm Ball Adapter (APMAMPS25MM)
- 1 - Robust™ Series 3.75 inch Shaft Arm (SP-RM250)
- 1 - Cup Holder Mounting Pedestal (SPRM023)

Please take note of the pads included in SPRM023 packaging:

- 1 - Set of 4 Self-Adhesive Pads (SP023PAD) - Optional

Please note the TAB006AMPS hardware specifications:

- 4 - M4 x 12mm Screws (Included)

Important: Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

Leg selection guide


Recommended legs to use based on tablet size with or without a case

- For tablets size **min 6.56" to max 8.94"** we recommend using 2 small legs
- For tablets size **min 7.03" to 9.50" max** we recommend using 1 long leg and 1 small leg
- For tablets size **min 9.50"** we recommend using 2 long legs

1

Install the AMPS adapter plate to the tablet holder


Align the AMPS 4-hole adapter on the back of the tablet holder. Then, insert the four mounting screws through the AMPS 4-hole ball adapter plate and into the tablet holder. Finally, secure the screws tightly.

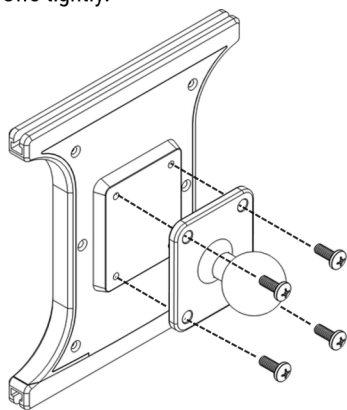

2

Expand the cup holder


To adjust the base to fit your car's cup holder area, simply twist it counterclockwise. In case of oversized cup holders, utilize the adhesive pads included in the package.

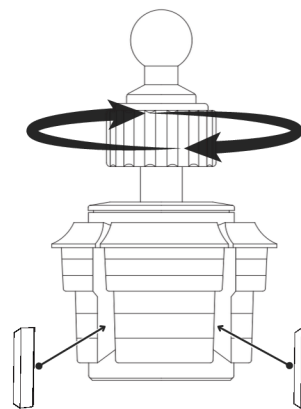

3

Assemble the components


Locate the shaft arm and turn to the adjustment knob counterclockwise to expand. Insert the 25mm ball ends into the shaft. Turn clockwise to tighten.

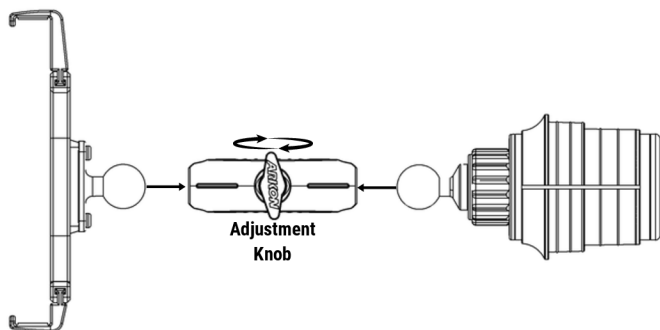

4

Fully assembled

Refer to the image below for the full assembled product.

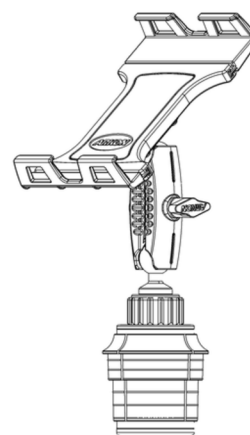

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2



5

Installing the legs to the holder


Install the support legs required based on the recommendations listed above. Slide the support legs into the holder's support leg channels.

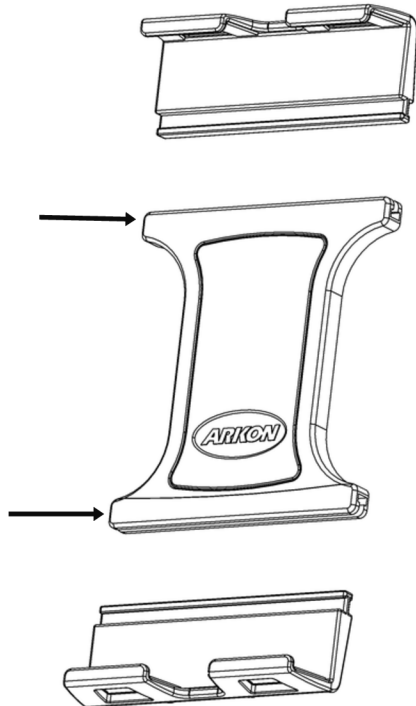

6

Extend the spring-loaded mechanism

To extend the legs, insert one end of the tablet into the bottom support legs.

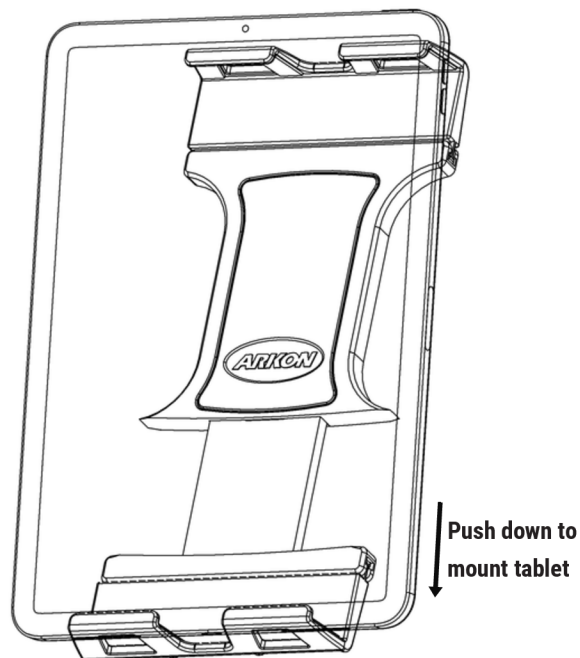

7

Install the tablet


With the holder's spring-loaded support legs expanded, lay the tablet flat on the holder.



8

Release the tablet to secure

Gently release the tablet into the holder, allowing the bottom spring-loaded support legs to secure the tablet.

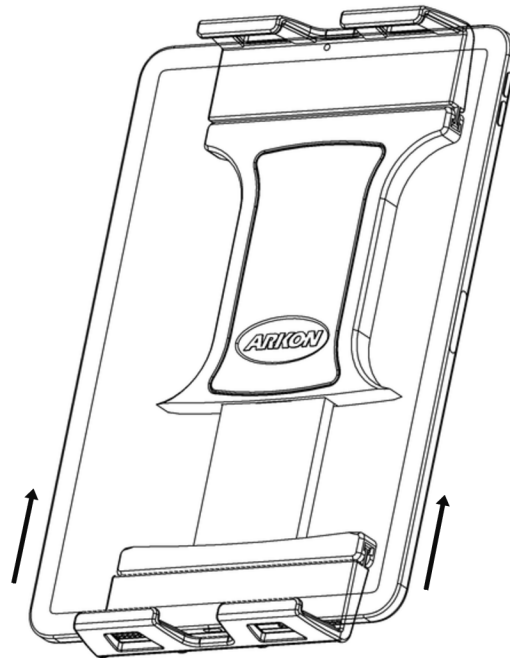

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

